

**MURTOA TO HOPETOUN**

**STANDARD GAUGE**

**1. CLASS OF LOCOMOTIVE AND PERMITTED SPEEDS (KM/H)**

		CLASS OF LOCOMOTIVE		
		G, XR, BL, 81	B, EL, GM, S, X	T, H, Y
MURTOA and WARRACKNABEAL	Freight	50	50	50
WARRACKNABEAL and BEULAH	Freight	50	65	65
BEULAH and HOPETOUN	Freight	50	55	55

**2. SPECIAL SPEED RESTRICTIONS**

Mainline class locomotives may be shunted onto the HOPETOUN Line at MURTOA subject to a maximum speed of 15km/h.

Warracknabeal - A Notice Board is provided at the UP end of the Warracknabeal Platform advising that the Maximum Speed for a Up Train between the Station Platform and Henty Highway Level Crossing PCR (348.289km) is not to exceed 15 kph

**SPEED LIMIT  
15 K.M.H. TO  
LEVEL XING**

**3. RULING GRADE LOADS (TONNES)**

SECTION	CLASSES OF LOCOMOTIVES						
	G, XR, BL, 81	B	EL, GM, S, X	T or H solo or multi with T or H	T or H multi with other class	Y solo or multi with T or H	Y multi with other class
<b>DOWN</b>							
<b>Murtoa to NULLAN</b>	..	..	..	..	..	1270	1270
<b>HOPETOUN</b>	<b>4000</b>	<b>1830</b>	<b>2135</b>	<b>1625</b>	<b>1625</b>	<b>900</b>	<b>900</b>
<b>UP</b>							
<b>Hopetoun to NULLAN</b>	..	..	..	<b>1625</b>	<b>1625</b>	<b>900</b>	<b>900</b>
<b>MURTOA</b>	<b>4000</b>	<b>1830</b>	<b>2135</b>	1830	1830	1270	1270

**4. SAFEWORKING SYSTEMS**

Train Order Working is in force between MURTOA to HOPETOUN.

	<b>STATUS – ATTENDED</b>	<b>STATUS – UNATTENDED</b>
MURTOA	Train Order Terminal Station	Unattended Train Order Terminal Station
WARRACKNABEAL	Attended Crossing Station	Intermediate Train Order Station
HOPETOUN	Unattended location	Unattended Train Order Terminal Station

A Proceed and Return Train Order may be issued between MURTOA and HOPETOUN.

**5. SPECIAL NOTES**

No Special Notes.

## MURTOA TO HOPETOON

### STANDARD GAUGE

#### 6. DISTANCES FROM MELBOURNE AND CLEAR LENGTH OF CROSSING ROADS

LOCATION	MARKED DISTANCE FROM MELBOURNE (KM) (VIA BALLAN)	CLEAR LENGTH OF CROSSING ROADS (LENGTH IN METRES)	
		NO. 1	NO. 2
MURTOA	298.320		
COROMBY	306.914	..	..
MINYIP	319.164	..	..
NULLAN	325.884	..	..
WARRACKNABEAL	348.506	177	..
WARRACKSIDE	349.836	..	..
BATCHICA SIDING	355.918	..	..
LAH	362.606	..	..
BRIM	368.373	212	140
GALAQUIL	377.935	..	..
BEULAH	384.084	..	..
BEULAH G.E.B. SIDING	385.000	639	639
ROSEBERY	395.886	..	..
GOYURA	400.661	..	..
HOPETOON	409.661	233	165

#### 7. TRACK CLASS

Track is maintained to CLASS 4 standards.

#### 8. PROTECTED LEVEL CROSSINGS

NAME AND KMS OF NEAREST STATION	LEVEL CROSSING	DISTANCE (KM)	TYPE	LOCATION NUMBER	VICROADS ID NO.
MINYIP – 319.164	Murtoa – Minyip Road	318.928	FL	AP3189	
WARRACKNABEAL – 348.506	Henty Highway	348.289	FL	AP3482	
	Kellsall Street	349.130	FL	AP3491	
	♣ Henty Highway	<b>350.771</b>	<b>FL</b>	<b>AP3507</b>	<b>19005</b>
HOPETOON – 409.661	♣ Henty Highway	<b>406.496</b>	<b>FL</b>	<b>AP4064</b>	<b>19006</b>

**BB** – Boom Barriers

**NSW** – R.I.C. Distance from Sydney

**T** – Equipped with Telephone Communication

**CC** – Crib Crossing

**PB** – Pedestrian Barriers

**VIC** – Victorian Broad Gauge

**FL** – Flashing Lights

**PG** – Pedestrian Gates

**IG** – Interlocked Gates

**SG** – Standard Gauge

**Note** ♣ Level crossing fitted with VicRoads Active Advance Warning Signs. Warning sign faults are to be reported to the VicRoads Fault Centre on 131170.