

## EAGLEHAWK TO INGLEWOOD

### BROAD GAUGE

#### 1. CLASS OF LOCOMOTIVE AND PERMITTED SPEEDS (KM/H)

		CLASS OF LOCOMOTIVE		
		G, XR, BL	A, B, GM, N, S, X	H, P, T, Y
EAGLEHAWK and INGLEWOOD	Freight	40	50	50

#### 2. SPECIAL SPEED RESTRICTIONS

Locomotives must not exceed 10km/h on the Mill Company Siding at Bridgewater.

#### 3. RULING GRADE LOADS (TONNES)

SECTION	CLASSES OF LOCOMOTIVES												
	G, XR, BL	N	GM, S, X	Mod A Class	A solo or multi with A	A multi with other class	B	H solo or multi with H, P, T or Y	H multi with other class	T or P solo or multi with H, P, T or Y	T or P multi with other class	Y solo or multi with T, Y, H or P	Y multi with other class
<b>DOWN</b>													
Eaglehawk to BRIDGEWATER	..	1120	1120	1220	950	950	915	710	710	710	710	510	510
INGLEWOOD	1750	1830	1830	1830	1625	1625	1625	1420	1420	1420	1420	1270	1270
<b>UP</b>													
Inglewood to BRIDGEWATER	..	2135	2135	2135	2135	2135	2135	1830	1830	1830	1830	1270	1270
LEICHARDT	..	1420	1420	1450	1220	1220	1220	815	815	815	815	..	..
EAGLEHAWK	1750	1220	1220	1250	1035	1035	1015	865	865	865	865	610	610

#### 4. SAFEWORING SYSTEMS

Train Order Working is in force between Inglewood to EAGLEHAWK.

	STATUS – ATTENDED	STATUS – UNATTENDED
INGLEWOOD	Attended Junction Station	Attended for all Trains to and from Secondary Corridor
BRIDGEWATER	Attended Crossing Station	Intermediate Train Order Station
EAGLEHAWK	Attended Junction Station	Attended for all Trains to and from Secondary Corridor

A Proceed and Return Train Order may be issued between BENDIGO to BRIDGEWATER and return to EAGLEHAWK.

#### 5. SPECIAL NOTES

No Special Notes.

#### 6. DISTANCES FROM MELBOURNE AND CLEAR LENGTH OF CROSSING ROADS

LOCATION	MARKED DISTANCE FROM MELBOURNE (KM) (VIA BENDIGO)	CLEAR LENGTH OF CROSSING ROADS (LENGTH IN METRES)	
		NO. 1	NO. 2
EAGLEHAWK	170.106	..	..
MARONG	181.048	..	..
LEICHARDT	188.788	..	..
BRIDGEWATER	203.451	530	530
INGLEWOOD	210.629	..	..

### NETWORK SERVICE PLAN

**EAGLEHAWK TO INGLEWOOD**

**BROAD GAUGE**

**7. TRACK CLASS**

Track is maintained to CLASS 4 standards.

**8. PROTECTED LEVEL CROSSINGS**

NAME AND KMS OF NEAREST STATION	LEVEL CROSSING	DISTANCE (KM)	TYPE	LOCATION NUMBER	VICROADS ID NO.
EAGLEHAWK – 170.106	Hopkins Avenue	171.515	FL	YK1715	
MARONG – 181.045	♣ <b>Calder Highway</b>	<b>179.937</b>	<b>BB</b>	<b>YK1799</b>	<b>19003</b>
	Calder Alternative Highway (Ravenswood – Marong Road)	180.930	BB	YK1809	
BRIDGEWATER – 203.451	♣ <b>Calder Highway</b>	<b>195.797</b>	<b>BB</b>	<b>YK1957</b>	<b>19004</b>
	Lyndhurst Street	203.683	FL	YK2036	

**BB** – Boom Barriers

**NSW** – R.I.C. Distance from Sydney

**T** – Equipped with Telephone Communication

**CC** – Crib Crossing

**PB** – Pedestrian Barriers

**VIC** – Victorian Broad Gauge

**FL** – Flashing Lights

**PG** – Pedestrian Gates

**IG** – Interlocked Gates

**SG** – Standard Gauge

**Note** ♣ Level crossing fitted with VicRoads Active Advance Warning Signs. Warning sign faults are to be reported to the VicRoads Fault Centre on 131170.